

# Assembly instructions

### 5C0 054 620

## Genuine anti-theft alarm system retrofit kit for Beetle

#### Scope of delivery:

- ◆ 1 x Contact switch -F266-
- 1 x Alarm horn
- ◆ 1 x Adapter cable

- 1 x Relay
- ◆ 1 x Fitting material
- ◆ 1 x Installation instructions

### Required special tools, test and measuring equipment and auxiliary equipment:

 Networked vehicle diagnostics, measurement and information system -VAS 505X- (online only) with the Volkswagen brand CD from V.18.08.00 as well as the basic CD version 18.00 or higher.

### **Installation process:**




- The Genuine anti-theft alarm system retrofit kit must be installed by an authorised workshop. Special tools are needed for the installation as well as detailed, vehicle-specific manuals. Incorrect fitting may lead to damage to the vehicle.
- An online SVMVW connection and the appropriate password are needed in order to update the vehicle software.
- ◆ All rights to make technical changes reserved.

#### Installing the contact switch -F266-1.1

- Remove the vehicle's hatch lock.
- ⇒ Bodywork tasks; repair group 55; cover, hatches; bonnet; remove and fit the hatch lock
- Fit the contact switch included in the scope of delivery in the hatch lock. Pull the pin connector -1- for the contact switch through the installation bay for the hatch lock.
- ⇒ Bodywork tasks; repair group 55; covers, hatches; bonnet; remove and fit the hatch lock
- Lay the wires for the contact switch parallel to the control wire. or the hatch lock.




- ◆ The anti-theft warning system connection to the vehicle wiring harness is located in the engine compartment on the cooler intake near the left headlight.
- ◆ The connections for the anti-theft warning system are protected against moisture by adhesive tape.
- Connect the pin connector -1- to the anti-theft warning system connection.
- Secure the wire for the contact switch to the existing holders or vehicle wiring using the supplied cable ties. Topological purposes, inparagonal purpose, inparagonal purp

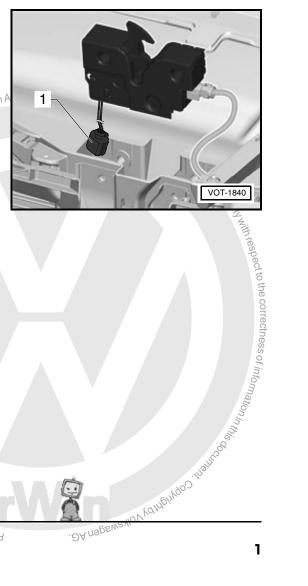




### Retrofitting the alarm horn -H12- for the anti-theft alarm system

- Mount the alarm horn -1- included in the scope of delivery in the middle of the vehicle's plenum chamber using the supplied fitting material -2-.
- ⇒ Electrical system; repair group 96; exterior lights, lamps, switches - interior; anti-theft alarm system; alarm horn H12
- Connect the plug -3- of the supplied adapter cable to the alarm horn.
- Remove the dummy stop from the vehicle's plug -arrow- in the plenum chamber and connect the free plug of the adapter cable.
- Secure the wire for the alarm horn to the existing holders or vehicle wiring using the supplied cable ties.

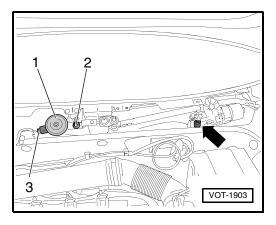

#### 1.3 Retrofitting relay for the anti-theft alarm system

- Plug the relay included in the scope of delivery in slot 1 of the relay carrier on the driver's side -arrow-.

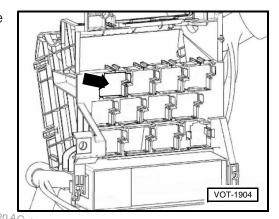


## Updating the vehicle software edby Volkswagen AG. V 1.4

- Connect a vehicle diagnosis, measurement and information system -VAS 505X- to the vehicle.
- ⇒ Electrical system, repair group 97; wiring, vehicle diagnosis, measurement and information systems; connect a vehicle diagnosis, measurement and information system -VAS 505X-
- Select the operating mode "Guided Trouble Finding" and then the respective vehicle within the vehicle diagnostics, measurement and information system -VAS 505X-.
- After querying the control units, select the "Functions/ component selection" via the button "Jump" and then sequentially the following menu options:
  - Software version management
  - Adapting Software
  - ◆ Perform conversion ₹ retrofit
- Enter the 5-character action code "35CBE".

After the code is entered the online connection is created and the software update carried out

After updating the software disconnect the vehicle diagnostics, measurement and information system -VAS 5051A- and perform a function test of the anti-theft alarm system.

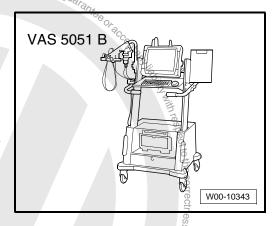

#### © 2011 Volkswagen Zubehör GmbH

Manghago inamagain No reprint, reproduction, or translation of this manual is permitted, even in excerpts, without the express written consent of Volkswagen Zubehör GmbH.

Volkswagen Zubehör GmbH expressly reserved all rights under applicable copyright law. Subject to change.

### **Cautions & Warnings**

Please read these WARNINGS and CAUTIONS before proceeding with maintenance and repair work. You must answer that you have read and you understand these WARNINGS and CAUTIONS before you will be allowed to view this information.

- If you lack the skills, tools and equipment, or a suitable workshop for any procedure described in this manual, we suggest you leave such repairs to an authorized Volkswagen retailer or other qualified shop. We especially urge you to consult an authorized Volkswagen retailer before beginning repairs on any vehicle that may still be covered wholly or in part by any of the extensive warranties issued by Volkswagen.
- Disconnect the battery negative terminal (ground strap) whenever you work on the fuel system or the electrical system. Do not smoke or work near heaters or other fire hazards. Keep an approved fire extinguisher handy.
- Volkswagen is constantly improving its vehicles and sometimes these changes, both in parts and specifications, are made applicable to earlier models. Therefore, part numbers listed in this manual are for reference only. Always check with your authorized Volkswagen retailer parts department for the latest information.
- Any time the battery has been disconnected on an automatic transmission vehicle, it will be necessary to reestablish Transmission Control Module (TCM) basic settings using the VAG 1551 Scan Tool (ST).
- Never work under a lifted vehicle unless it is solidly supported on stands designed for the purpose. Do not support a vehicle on cinder blocks, hollow tiles or other props that may crumble under continuous load. Never work under a vehicle that is supported solely by a jack. Never work under the vehicle while the engine is running.
- For vehicles equipped with an anti-theft radio, be sure of the correct radio activation code before disconnecting the battery or removing the radio. If the wrong code is entered when the power is restored, the radio may lock up and become inoperable, even if the correct code is used in a later attempt.
- If you are going to work under a vehicle on the ground, make sure that the ground is level. Block the wheels to keep the vehicle from rolling. Disconnect the battery negative terminal (ground strap) to prevent others from starting the vehicle while you are under it.
- Do not attempt to work on your vehicle if you do not feel well. You increase the danger of injury to yourself and others if you are tired, upset or have taken medicine or any other substances that may impair you or keep you from being fully alert.
- Never run the engine unless the work area is well ventilated. Carbon monoxide (CO) kills.
- Always observe good workshop practices. Wear goggles when you operate machine tools or work with acid. Wear
  goggles, gloves and other protective clothing whenever the job requires working with harmful substances.
- Tie long hair behind your head. Do not wear a necktie, a scarf, loose clothing, or a necklace when you work near machine tools or running engines. If your hair, clothing, or jewelry were to get caught in the machinery, severe injury could result.
- Do not re-use any fasteners that are worn or deformed in normal use. Some fasteners are designed to be used
  only once and are unreliable and may fail if used a second time. This includes, but is not limited to, nuts, bolts,
  washers, circlips and cotter pins. Always follow the recommendations in this manual replace these fasteners with
  new parts where indicated, and any other time it is deemed necessary by inspection.

### **Cautions & Warnings**

- Illuminate the work area adequately but safely. Use a portable safety light for working inside or under the vehicle. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.
- Friction materials such as brake pads and clutch discs may contain asbestos fibers. Do not create dust by grinding, sanding, or by cleaning with compressed air. Avoid breathing asbestos fibers and asbestos dust. Breathing asbestos can cause serious diseases such as asbestosis or cancer, and may result in death.
- Finger rings should be removed so that they cannot cause electrical shorts, get caught in running machinery, or be crushed by heavy parts.
- Before starting a job, make certain that you have all the necessary tools and parts on hand. Read all the
  instructions thoroughly; do not attempt shortcuts. Use tools that are appropriate to the work and use only
  replacement parts meeting Volkswagen specifications. Makeshift tools, parts and procedures will not make good
  repairs.
- Catch draining fuel, oil or brake fluid in suitable containers. Do not use empty food or beverage containers that might mislead someone into drinking from them. Store flammable fluids away from fire hazards. Wipe up spills at once, but do not store the oily rags, which can ignite and burn spontaneously.
- Use pneumatic and electric tools only to loosen threaded parts and fasteners. Never use these tools to tighten
  fasteners, especially on light alloy parts. Always use a torque wrench to tighten fasteners to the tightening torque
  listed.
- Keep sparks, lighted matches, and open flame away from the top of the battery. If escaping hydrogen gas is ignited, it will ignite gas trapped in the cells and cause the battery to explode.
- Be mindful of the environment and ecology. Before you drain the crankcase, find out the proper way to dispose of the oil. Do not pour oil onto the ground, down a drain, or into a stream, pond, or lake. Consult local ordinances that govern the disposal of wastes.
- The air-conditioning (A/C) system is filled with a chemical refrigerant that is hazardous. The A/C system should be serviced only by trained automotive service technicians using approved refrigerant recovery/recycling equipment, trained in related safety precautions, and familiar with regulations governing the discharging and disposal of automotive chemical refrigerants.
- Before doing any electrical welding on vehicles equipped with anti-lock brakes (ABS), disconnect the battery negative terminal (ground strap) and the ABS control module connector.
- Do not expose any part of the A/C system to high temperatures such as open flame. Excessive heat will increase system pressure and may cause the system to burst.
- When boost-charging the battery, first remove the fuses for the Engine Control Module (ECM), the Transmission Control Module (ECM), the ABS control module, and the trip computer. In cases where one or more of these components is not separately fused, disconnect the control module connector(s).
- Some of the vehicles covered by this manual are equipped with a supplemental restraint system (SRS), that automatically deploys an airbag in the event of a frontal impact. The airbag is operated by an explosive device. Handled improperly or without adequate safeguards, it can be accidentally activated and cause serious personal injury. To guard against personal injury or airbag system failure, only trained Volkswagen Service technicians should test, disassemble or service the airbag system.

- Do not quick-charge the battery (for boost starting) for longer than one minute, and do not exceed 16.5 volts at the battery with the boosting cables attached. Wait at least one minute before boosting the battery a second time.
- Never use a test light to conduct electrical tests of the airbag system. The system must only be tested by trained Volkswagen Service technicians using the VAG 1551 Scan Tool (ST) or an approved equivalent. The airbag unit must never be electrically tested while it is not installed in the vehicle.
- Some aerosol tire inflators are highly flammable. Be extremely cautious when repairing a tire that may have been inflated using an aerosol tire inflator. Keep sparks, open flame or other sources of ignition away from the tire repair area. Inflate and deflate the tire at least four times before breaking the bead from the rim. Completely remove the tire from the rim before attempting any repair.
- When driving or riding in an airbag-equipped vehicle, never hold test equipment in your nands or lap while the vehicle is in motion. Objects between you and the airbag can increase the risk of injury in an accident.

Protected by Copyright, Cop.

I have read and I understand these Cautions and Warnings. .DA negswexloV Vahlgingoo

